

# **BTT 150 - 1500 Kg Capacity Tipping Trailer With Removable Drop Sides**

**(Unladen Weight; 400 Kgs)**



**Operators Manual**

**BEACONSFIELD PRODUCTS (HALESOWEN) LTD**  
**OPERATIONAL ADVICE FOR; BTT150 - 1.5 TON TIPPING TRAILER**

**CAPACITY; MAX LOAD; 1500 KGS**

**GVW; 1900 KGS**

**PLEASE READ THIS ADVICE MANUAL BEFORE USING YOUR MACHINE SAFELY. KEEP THIS MANUAL FOR FUTURE USE. ANY QUERIES ASK YOUR DEALER BEFORE OPERATION.**

**OPERATORS;**

Persons under the age of 16 years **MUST NOT** operate this implement. Only after authorised persons have read and understood these instructions can this trailer be put into use.

**NEVER DISTRACT ANYONE USING THIS MACHINE. USE ONLY TRAINED OPERATORS**

Keep a safe distance of at least 10 mtrs between people, animals and property when operating this machine

**Do Not Use This Trailer To Carry Persons Or Livestock**

**MAXIMUM RECOMMENDED SPEED OF OPERATION IS 25 K/HR For Off Road Use Only**

**SAFETY;**

When attaching and detaching trailer ensure it is done so safely positioned on a stable level surface using only one operator to perform this function

Never attempt to manually move this trailer or stand with your feet under the or near the drawbar

**NEVER** operate on ground that may render the tractor unstable and take extra care when on sloping ground

**NEVER** attach to a tractor that would be rendered unstable with trailer at its full capacity load of 1500 Kgs and take note of the Maximum Load Permissible for your tractors pick up hitch

**NEVER** tip near overhead power lines, only tip on firm level ground and never permit anyone to stand behind or beside trailer whilst tipping

**NEVER** enter the Danger Zone between Chassis and Tub

**NEVER** allow anyone to stand behind trailer when reversing and take extra precautions checking for obstructions that may be there

**PARKING;**

Park on firm level surface. Chock the wheels and lower parking stand, detach hydraulics then unhitch and drive clear

**WHEN** removing Drop Sides it is advisable that TWO people perform this operation

**HYDRAULICS;**

**CAUTION** Hydraulic system is under pressure **KEEP HANDS CLEAR OF ANY LEAKS** Oil under pressure can penetrate skin and cause severe injury

**CHECK** Hoses regularly and renew any that are damaged or worn. Use High Pressure Hose Only.

Continued Over.....

**BEFORE** working on hydraulics, lower the trailer, release pressure from system and switch off tractor engine

**MAINTENANCE;**

**PRIOR** to any maintenance, stop engine, remove key and disengage drive system

**BEFORE** carrying out any maintenance work chock the wheels and prop the trailer with suitable supports. If it is necessary to work with the tub in the tipped position always prop trailer deck with a secure mechanical means. **DO NOT RELY ON HYDRAULIC SUPPORT ALONE.**

**REGULARY** check tightness of all bolts including wheel nuts

**REGULARY** lubricate hydraulic cylinder and hinges using clean grease

**ALWAYS** ensure warning stickers are clean and in good condition

**THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR DAMAGES OR INJURY CAUSED BY UNAUTHORISED REPAIR, ALTERATIONS OR MISHANDLING OF PRODUCT**

---

**EU CERTIFICATE OF CONFORMITY**

**CONFORMING TO EC Machinery Directive 93/37 EC**

**We;**  
**Beaconsfield Products (Halesowen) Ltd**  
**Upper Works, Foxoak Street, Cradley Heath**  
**West Midlands B64 5DE**

**Declare in sole responsibility, that the product**

**Type; BTT 150 - 1500 Kg Tipping Trailer**

**To which this certificate applies, conforms to the basic safety and health requirements of the EC Machinery Directive 98/37 EC and the Transposed Harmonised Standards; BS EN 1553 (2000)**

