

Operators Manual

PF500 Pallet Forks



Kilworth Machinery Ltd., Annwell Lane, Smisby, Ashby de la Zouch LE65 2TA
Tel: 01530 412690 Fax: 01530 560002 Email: sales@kilworthmachinery.co.uk
www.kilworthmachinery.co.uk

INTRODUCTION

We would like to start by thanking you for having chosen our product & hope that you will be happy with your choice.

In order that your machine will serve you well for many years, we ask you to pay great attention to the instructions for *Use & Maintenance* which you will find in this manual.

Observance of these regulations will prevent breakdowns & accidents for which our company will not accept responsibility.

SAFETY PRECAUTIONS

Most accidents that occur during work, maintenance or the moving of a machine are due to negligence in the observance of the most elementary rules of accident prevention. It is, therefore, necessary that all users scrupulously read and note the rules written below.



ATTENTION



This symbol will be used throughout this Manual each time your safety or the safety of others is in danger or where the normal functioning of your machine can be jeopardised. Please pay particular attention to the paragraphs headed in this symbol.

Take all possible precautions when leaving the tractor unattended, such as lowering the attachment, shifting into neutral, setting parking brake, stopping the engine & removing the key.

Keep all nuts, bolts & screws tight and be sure that the equipment is regularly lubricated to keep it in safe working condition.

Ensure all guards & covers are in working order and position before commencing work.

Only use machine for the tasks it is designed for.

Never operate the machine with persons on or near it.

Consult the tractor manual for instructions on attaching implements and safe working methods.

Observe all safe driving procedures, reduce speed on slopes & sharp turns, avoid working in areas where there is a risk of overturning.

Always wear suitable clothing & safety gear. In particular, avoid loose clothing which may become caught in moving parts. Wear gloves when handling sharp corners & edges.

Never allow children or untrained persons to operate the machine.

Never carry out repairs or adjustments unless the tractor engine is stopped and the machine safe.

Description

The 500Kg Pallet Fork is suitable for use with compact tractors, designed for movement of pallets and special goods.

Specification

Tractor mounting - Cat I three point linkage
Construction - In suitable RHS steel, welded
Dimensions - Main frame 710mm x 710mm
Tines 80mm x 40mm, useable length 914mm
Tine centres 630mm, overall width 710mm
Suitability - For compact tractors for loads of no more than 500Kg.

Operating Information



ATTENTION



When loading make sure the load is within the capacity of the machine and tractor. Ensure the load is evenly distributed over both tines & is secure before moving. Do not use one tine to lift or shunt things. Do not load on the end of the tines. Ensure that the correct linkage pins are used and linch pins are fitted.

Maintenance & Storage

Check regularly that there is no sign of stress on the machine.

Clean & touch-up regularly to avoid corrosion.