

# SH Grass Harrow

## Operators Manual



Kilworth Machinery Ltd., Annwell Lane, Smisby,  
Ashby de la Zouch LE65 2TA Tel: 01530 412690

Email: [sales@kilworthmachinery.co.uk](mailto:sales@kilworthmachinery.co.uk)

[www.kilworthmachinery.co.uk](http://www.kilworthmachinery.co.uk)

## INTRODUCTION

We would like to start by thanking you for having chosen our product & hope that you will be happy with your choice.

In order that your machine will serve you well for many years, we ask you to pay great attention to the instructions for *Use & Maintenance* which you will find in this manual.

Observance of these regulations will prevent breakdowns & accidents for which our company will not accept responsibility.

## SAFETY PRECAUTIONS

Most accidents that occur during work, maintenance or the moving of a machine are due to negligence in the observance of the most elementary rules of accident prevention. It is, therefore, necessary that all users scrupulously read and note the rules written below.



### ATTENTION



Take all possible precautions when leaving the tractor unattended, such as lowering the attachment, shifting into neutral, setting parking brake, stopping the engine & removing the key.

Keep all nuts, bolts, & screws tight and be sure that the equipment is regularly lubricated to keep it in safe working condition.

Ensure all guards & covers are in working order and position before commencing work.

Only use machine for the tasks it is designed for.

Never operate the machine with persons on or near it.

Consult the tractor manual for instructions on attaching implements and safe working methods.

Observe all safe driving procedures, reduce speed on slopes & sharp turns, avoid working in areas where there is a risk of overturning.


Always wear suitable clothing & safety gear. In particular, avoid loose clothing which may become caught in moving parts. Wear gloves when handling sharp corners & edges.

Never allow children or untrained persons to operate the machine.

Never carry out repairs or adjustments unless the tractor engine is stopped and the machine safe.

## ADJUSTMENTS OF THE SPRING HARROW

### TINE ANGLE

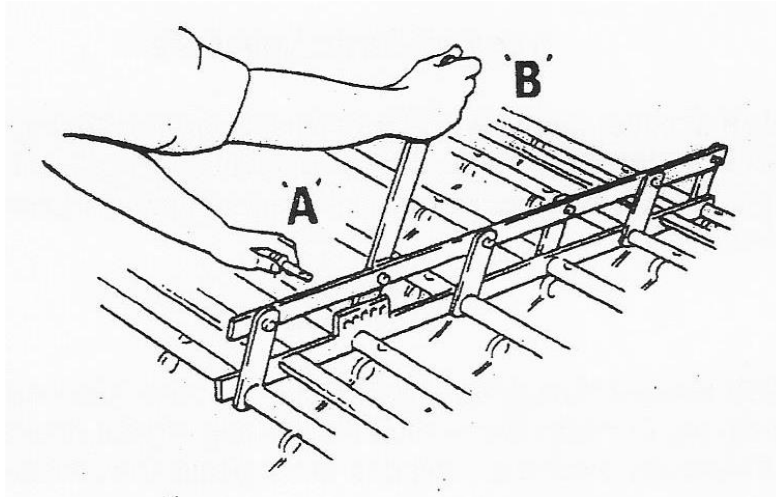

1. Raise the machine clear of the ground.
2. Remove locking pin A at the base of the adjusting handle.
3. Operate adjusting handle B to increase / decrease the aggressiveness of the tines.
4. Carry out the above operation on each individual section if your machine has more than one section. (Ensure that each section is adjusted to the same setting).

### HEIGHT SETTING

1. Lower the machine to the ground until contact with the ground is made.
2. Adjust the top link to ensure that all the tines are in even contact with the ground.

### SAFE USE OF THE SPRING HARROW

1. Fully lower the machine to the ground.
2. Excessive operational speed will cause rapid wear on the Spring Harrow tines and mounting pins. Therefore the maximum speed at which the Spring Harrow should be used is 8 m.p.h.
3. Do not reverse and avoid sharp turns with machine lowered to ground.

